


MRDOTT2 & MRASTRA WALL SCONCE

INSTALLATION INSTRUCTIONS SHEET

START FROM HERE

- Make sure power is completely off at the fuse box.
- Have your fixture installed by a qualified registered electrician
- Prepare everything in clear area.
- Wear gloves at all times during this installation.
- Read instructions carefully before you start assembly.
- Keep this instruction sheet for future reference.

Technical Support: 0800-67-72574

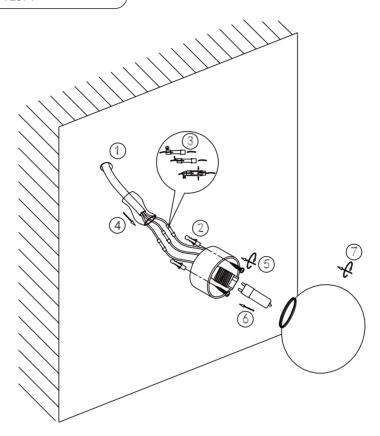

- Ensure the main supply is switched off at the mains.
- Unpack the wall sconce carefully and place it on a flat surface.
- Drill a hole in the wall, pull the fixed installation cable out of the wall (1)
- Insert wall plugs into mounting surface (2)
- Install crimp connectors (Supplied in the component bag) to the cables and making sure all connections are tight. If there is room, stagger the connectors. (3)
- Put a length of heat shrink (Supplied in the component bag) on the fixed installation cable. Connect the crimp connectors to the fixed installation cable. Slide the heat shrink into position and activate (4)
- Fix the baseplate into a solid substrate with supplied screws (5)
- Install the bulb (not included) into lamp holder. (6)
- Screw on the glass shade (7)
- · Reconnect power.
- Light source: G9 LED 5W MAX.

WARNING:

- This fitting must be earthed.
- · Not for outdoor use or in wet conditions.
- Disconnect power and allow fitting to cool down before cleaning or changing the lamp.